



## Objective

To Upload / Download a ConfigEd Lite configuration to or from your PC.

## Equipment

A computer with ConfigEd Lite software installed and communications cable (CM351909).

## Procedure

### Upload a Configuration from the Drive into the computer

1. Launch ConfigEd Lite on the computer. Refer to ConfigEd Lite manual RG352747.
2. Connect the communications cable from the comm port on the computer to the P3 port on the drive.  
Note: In the CE Lite software verify the baud rate is 9600 under Command::Comms
3. Verify communications to the drive by going under **COMMAND::GET INFO**. After clicking on GET INFO  
The drive you are connected should be shown on the scratch pad.  
Note: If an error message appeared when you clicked on GET INFO, verify comm port and settings.
4. Under **FILE::NEW**, open the default configuration for the drive that appeared in the scratch pad.  
(Example: 590 Version 4 (not running) - choose **DEFAULT4.590**.)
5. Under the Command menu click on “update.”
6. After the program has finished updating, Save the file.  
Note: Do not change the extension of the file.

### Download a Configuration to the drive

1. Launch ConfigEd Lite on the computer. Refer to ConfigEd Lite manual RG352747.
2. Under **FILE::OPEN**, open the desired configuration to install.  
(Example: Winder1.590)  
Note: In the CE Lite software verify the baud rate is 9600 under Command::Comms.
3. Under the Command menu click on “full install.”

If you have questions, please call the Product Support Group at (704) 588-3246.