

Objective

To import/export a Link DSD (Drive System Designer) configuration to/from your PC.

Equipment

A computer with *LINK* DSD & Manager software, a diskette, *LINK* Manager manual RG352101

Procedure

Importing a Configuration

1. Launch *LINK* Manager on the computer.
2. Insert the disk with a copy of the PROJECT into disk drive.
3. Select menu *Project / Import*
4. Click Read Only if you need a copy of the configuration. Click Read Write if you need a copy to make changes to configurations in the PROJECT.
5. Select the disk drive the project is located on.
6. Select the project to import (*ex 00000012.001*), then click OPEN

Note: If the Project doesn't contain the TOKEN, then select READ ONLY.

7. After the import has been completed, a window will display OPERATION COMPLETED NORMALLY.
 8. Next click OK, then Done
- Note: The import process is complete.

9. Launch DSD on the computer.
10. Select menu *Project / Manage*
11. Click *Find Project*
12. Insert Project Number (*ex 00000012*), DSD will find the project in your database.
13. Next click DONE

Exporting a Configuration

14. Launch *LINK* Manager on the computer.
15. Select menu *Project / Export*
16. Select Category | Project, verify the Project Number below

Note: The Export Read | Write is only highlighted if the token resides with the Project.

17. Insert a disk to the floppy drive.
18. Click Read Only, Select the floppy drive to save the configuration on, then OK.
19. Next click OK, then Done

If you have questions, please call the Product Support Group at (704) 588-3246.